

DWC-XSTD05MFQ - QR Code Plugin DW



Default Login Information: admin | admin When logging into the camera for the first time, you must setup a new password. You can set the new password using the  $\mathsf{DW}^*$  IP Finder  $^\mathsf{TM}$  software or directly from the camera's browser menu.

WHAT'S IN THE BOX

Plastic

Anchors - 2pcs

1 set


	Mounting Template	+	1	Star Wrench (T10)		1	
	Hexagonal wrench 2.0	<b>/</b>	1	Moisture Absorber (Recommended)		3 sets	
	Waterproof Cap and Rubber Rings (Black: Ø0.15" (Ø4mm), White: Ø0.19" (Ø5mm))		1 set				
NOTE: Download all your support materials and tools in one place							
<ol> <li>Go to: http://www.digital-watchdog.com/resources</li> <li>Search your product by entering the part number in the 'Search by Product' search bar. Results for applicable part numbers will populate automatically based on the part number you enter.</li> <li>Click 'Search'. All supported materials, including manuals and quick start guide (QSGs) will appear in the results.</li> </ol>							
Attention: This document is intended to serve as a quick reference for the initial set-up. It is recommended							
that the user read the entire instruction manual for complete and proper installation and usage.							


1. Install the Dessicant Pack (moisture absorber):

Quick Setup and Download

Guide

- wrench included with the camera. Remove the Dessicant Pack used for shipping.
- STEP 1 PREPARING TO MOUNT THE CAMERA Open the camera's control panel on the side of the camera using the star and close the camera control panel tightly.

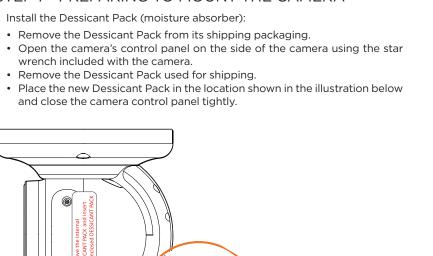

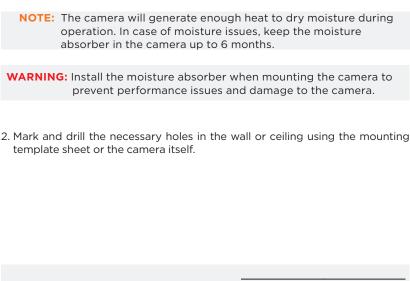

Pass the wires through and make all necessary connections. Use a PoE Injector (required. Sold Use a non-PoE Switch to connect separately) to connect data and data using an Ethernet cable and power to the camera using a single use a power adapter to power the

OR

between 🗿 and 🗿. In extreme environments use of an outdoor rated sealer is recommended.

camera.

**◯** ← □>-(1)-(1)

SEAL TAPE

≣]



STEP 2 - POWERING THE CAMERA

Resetting the camera: Press the reset button for five (5) seconds to initiate a camera-wide reset of all the settings,

including network settings.

Ethernet cable.

**Power information** 

Power requirements

Power consumption

Maximum distance

Connector

b

DC12V, PoE IEEE 802.3at Class4 (Adapter not included)

12V DC: 12W, 1A, PoE: 15.8W, 330mA

328' (100m)


Secure the camera to the mounting surface using the included screws.


between the camera and the mounting surface.

NOTE: Remove the rubber plug on the side of the camera's base and use the gap as a cable guide to prevent cables from getting caught

RJ45

STEP 3 - INSTALLING THE CAMERA

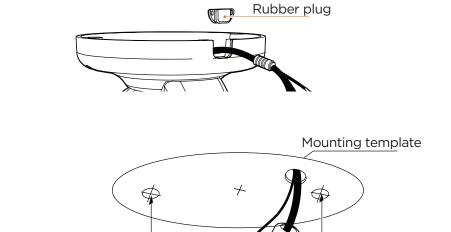

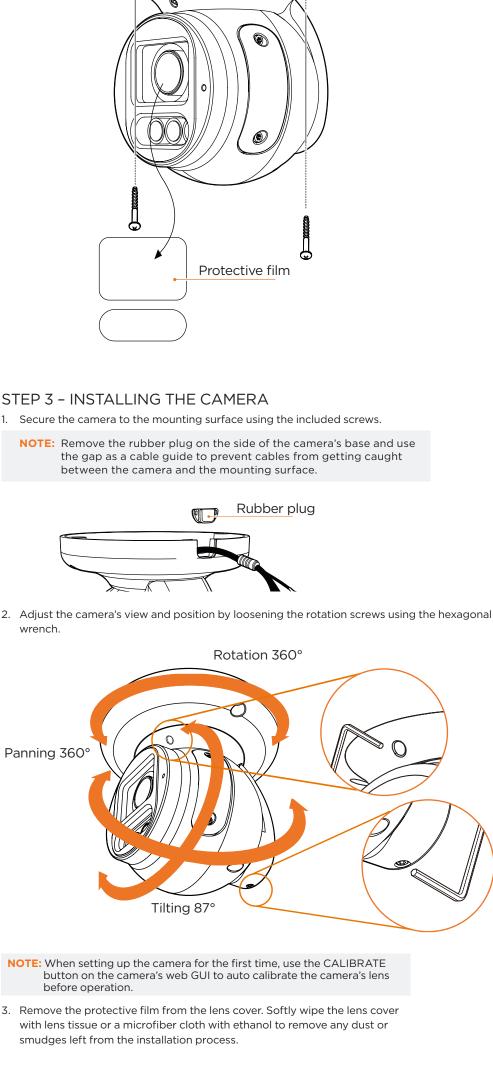

Alarm Out

Network

- The GUI display may differ by camera model.
- STEP 8 QR CODE READER (DWC-XSTD05MFQ model)
  - > VIDEO & AUDIO License key Preactivation Activation c > CAMERA > NETWORK > TRIGGER ACTION Activated License(s) V MEGAPIX AI
- according to the lens angle of view is as follows: Full wide (110°): up to 4.5ft (1.4m).

• 90° Horizontal Angle of View: up to 5.2ft (1.6m).

NOTE: Please see the full product manual for web viewer setup, functions and camera settings options. This products is covered by one or more claims of the HEVC Patents listed at patentlist.accessadvance.com. NOTE:

1. Open the camera's control panel on the side of the camera using the star wrench included with the camera. 2. Insert class 10 SD/SDHC/SDXC card into the SD card slot by pressing the SD card until it clicks. 3. Press the card inward until it clicks to release from the card slot, then remove the card. NOTE: Maximum SD Card size supported: Up to 1TB micro SD / FAT32. When inserting the SD card into the card slot, the SD card's contacts should be facing upward, as shown in the diagram.

(0

DI (+)

DO (-)

DO (+)

WHITE

SKY BLUE

GRAY + DOT

4 Alarm In

SD Card Slot

STEP 4 - CABLING

STEP 5 - MANAGING THE SD CARD (OPTIONAL)

STEP 6 - DW® IP FINDER™ Download and install the DW IP Finder from the DW website at: http://www.digital-watchdog.com Open the DW IP Finder and click 'Scan Devices' to find the camera on the network. 3. A password must be set when connecting to the camera for the first time. a. Check the box next to the camera.

c. Enter admin/admin for the current username and password. Enter a new username and

Password must have at least eight (8) characters and at least four (4) combinations of uppercase and lowercase letters, numbers and special characters. Passwords cannot

b. Click "Bulk Password Assign" on the left.

d. Click "change" to apply all changes.

Find the camera using the DW IP Finder.

http://192.168.10.159/ - IP Camera - Internet Explorer

Password Hint

3. Press the 'View Camera Website.'

2. Double-click on the camera's view in the results table.

password to the right.

contain the user ID.

STEP 7 - WEB VIEWER

Change admin's password Retype Password

> Password requirement: minimum 8 characters with at least three combinations of uppercase letters, lowercase letters, numbers and special characters. Acceptable special characters are;  $\sim$  ` ! \$ ^ ( ) \_ - | { } [ ]; . ? /

The QR code recognition comes preloaded on DWC-XSTD05MFQ models. It

[ Type the Password ]

4. Enter the camera's username and password you set up in the DW IP

If you did not set up a new username and password, a message will direct you to set up a new password for the camera to view the video.

NOTE: On these models, the MEGApix Ai plugin is turned off by default. WATCHDOG LICENSE

Go to Settings > MEGApix AI > License. Check the button next to "Preactivation."

Click on the "ACTIVATE" button.

must be activated before use.

ENABLE RULES COUNTERS BURNT-IN ANNOTATION TCP NOTIFICATION

• 45° Horizontal Angle of View: up to 12.8ft (3.9m). • Full tele (30°): up to 6.4ft (5.0m)

Tel: +1 (866) 446-3595 / (813) 888-9555 Technical Support Hours: 9:00AM - 8:00PM EST, Monday through Friday

• Full tele (30°): up to 32.8ft (10.0m). NOTE: Reducing the print size proportionally decreases the recognizable If the QR code is reduced by half (3.34"/8.5cm), the recognizable distance

Rev: 11/24

ADVANCED Minimum QR Code Size QR codes should be no smaller than 1/18 of the screen's vertical resolution. For a 2592(H) X 1944(V) display, this equates to approximately 108 pixels. This size is akin to that of a QR code on a box on the floor, as illustrated in the figure below. Recognizable Distance A QR code printed on A4 paper, with each side being 6.7" (17cm), can be recognized from varying distances depending on the lens's angle of view: • Full wide (110°): up to 9ft (2.8m). 90° Horizontal Angle of View: up to 10.5ft (3.2m). 45° Horizontal Angle of View: up to 25.5ft (7.8m).

digital-watchdog.com